

Cartridge Filter



DELUXE SYSTEM OWNER'S MANUAL

CLEARWATER II CARTRIDGE FILTER SYSTEM OWNER'S MANUAL

Our ClearWater II Cartridge Filter System is shipped from Waterway complete with everything you need right in the box. Assemble filter system only after above-ground pool is installed. Fill pool with water. Do not raise water level above pool return line.

The pool equipment should be located between pool skimmer and return line. The filtration system should not be closer than 2 ft. and not further than 5 ft. from the pool. The ClearWater II Cartridge Filter System needs to be on a completely flat surface (e.g. patio block, cement slab, etc.). The pump will require a 110 volt/20 amp service.



WARNING: A GFCI is required. Follow national and local building and safety codes.

Before opening shipping carton, make sure box is in the upright position. Inside the carton, you will find:

- 1. One base
- 2. One pump (packaged in separate box)
- 3. One filter
- 4. One bag with fittings

INSTALLATION INSTRUCTIONS




WARNING! READ ALL INSTRUCTIONS AND WARNING LABELS BEFORE OPERATING FILTER!

- 1. Place filter and base on a level, secure surface. Open fittings bag and remove coupling assembly (Detail 2). Assemble 2" gasket, coupling, coupling o-ring, and 2" union nut, and thread into inlet side of filter.
- 2. Place the pump on the base to the left of the filter. The pump should align wth coupling on filter side marked "Inlet". There is no need to disassemble filter or pump assemblies.
- 3. Thread 2" union nut to pump discharge (Detail 2).
- 4. Secure pump to the base using the pin & anchor assemblies (Detail 1).

- 5. From the fittings package, remove 1 ½" buttress tailpiece, o-ring, and 1 ½" union nut assembly (Detail 2). Thread into the outlet side of the filter tank.
- Remove the lid handle, #4a, from the fittings bag and attach it to the top of the lid assembly, #4, as shown (Detail 3). Secure Clearwater Filter to Clearwater Filter Base using #15a phillips head screws (2), (Detail 4 & 5). Fill pool until water level is halfway up length of skimmer throat.
- 7. Open air release knob. Plug in and turn on pump. Air will pass out of the filter through the air release knob. Once water discharges from knob, close it.

NOTE: To remove lid assembly, take off filter nut, #6, insert filter wrench, #9a, in notch between filter body, #9 and lid assembly, #4, twist and separate as shown in Detail 5.

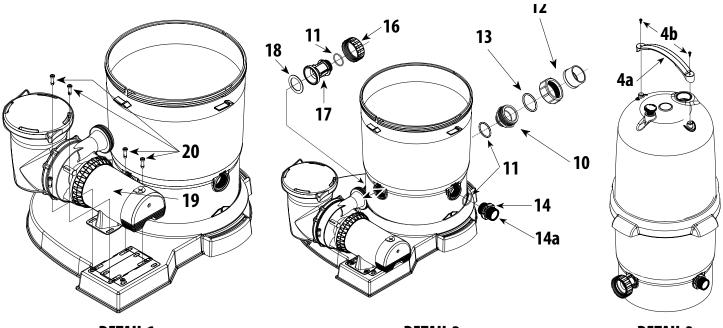



DETAIL 1

DETAIL 3

CLEARWATER II CARTRIDGE FILTER SYSTEM PARTS LIST

ltem	Part No.	Description
1	830-4000SS	Pressure Gauge
1a	805-0224	O-Ring
1b	519-7431	Pressure Gauge – Fitting Adapter
1c	805-0117SD	O-Ring
2	602-0200	Air Relief Plug
3	805-0207	0-Ring — Air Relief
4	511-7327	Lid Assembly – Small (75/100)
	511-7337	Lid Assembly — Large (150/200)
4a	519-7601	Lid Handle
4b	819-9002	#12 x ¾" S/S Phillips Head Screw
5	805-0460	Lid O-Ring
6	718-7251	Filter Nut (sold with Lid Assembly Only)
ба	519-7451	Lock-Tab
7	519-7441	Wing Nut
8	817-0075P	75 sq. ft. Cartridge
	817-0100P	100 sq. ft. Cartridge
	817-0150N	150 sq. ft. Cartridge
	817-0200N	200 sq. ft. Cartridge
9	515-7257	Body – Filter Bottom
9a	519-7470	Filter Wrench (see Detail 4)
10	417-4161	1 ½" Buttress Thread x 1 ½" NPT - Tailpiece
11	805-0224	O-Ring
12	400-5640	1 ½" Union Nut Assembly with Gasket
13	711-4000	1 ½" Union Gasket
14	500-5300	Drain Assembly
14a	505-2030	Drain Cap
15	672-7401	ClearWater II Base
15a 16	819-0044	#10 x 1" S/S Phillips Head Screw
16 17	415-5001	2" Union Nut
17 10	419-7241	Coupling 2" Union Gasket
18 19	711-4010 DCD1100	1 HP – 1-Speed Supreme Pump
19	PSP1100 PSP1150	1 ½ HP – 1-Speed Supreme Pump
	PSP1150 PSP1200	2 HP — 1-Speed Supreme Pump
	PSP2100	1 HP – 2-Speed Supreme Pump
	PSP2100 PSP2150	1 ½ HP – 2-Speed Supreme Pump
	PSP2200	2 HP – 2-Speed Supreme Pump
20	429-7221	Pin & Anchor Assembly
20	311-1520	Faceplate – Supreme Pump
22	805-0330	O-Ring
23	319-1510	Supreme Pump Trap Body
24	319-1530	Supreme Trap Basket
25	805-0439	0-Ring
26	511-1310	Trap Lid
27	319-1540	C-Clip Supreme Pump
		1

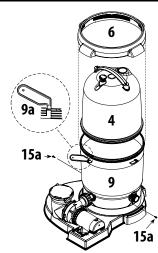

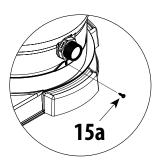

DETAIL 5

DETAIL 4



₫---27

18

20

20

19

26

25

24


O.O.

23

22 21

13

12[,]

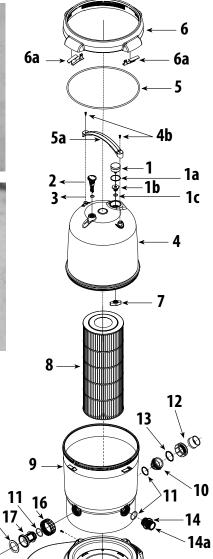

-15

15a (x 2)

CLEANING INSTRUCTIONS

If the pressure gauge on your filter reads 5 PSI or higher than the original starting pressure, the filter needs to be cleaned. The ClearWater II Cartridge Filter System features the exclusive 1-2-3 Safety Locking System to ensure safe and simple filter maintenance.

- 1. Turn off pump. WARNING: Never attempt to clean filter while pump is running. This is a pressurized vessel. It could cause severe injury or harm to your person. Plug skimmer and pool return lines or drain pool water level to below pool return line.
- 2. Slowly open the air release knob on top of filter until the pressure gauge reads "0". Open drain cap at bottom of filter and allow water to flow.

- 3. Press the yellow safety latch on the underside of the locking nut and turn the nut counterclockwise to remove the lid. Rinse the cartridge element with a garden hose. There is no need to remove the element from the filter.
- 4. Reassemble lid and follow start-up procedures from original instructions.

My Original Starting Pressure is	_ PSI (Pounds per
Square Inch). I should clean the filter at	PSI.

WARRANTY

For product registration visit: www.waterwayplastics.com. For Warranty questions or claims please contact point of purchase.



©2018 Waterway Plastics



2200 East Sturgis Road, Oxnard CA 93030 • Phone 805.981.0262 • Fax 805.981.9403 www.waterwayplastics.com • waterway@waterwayplastics.com