2 ½" S / 3" SPG SERVICEABLE SWING CHECK VALVE INSTALLATION INSTRUCTIONS



Straight Body Check Valve (600-0111)

READ AND FOLLOW ALL INSTRUCTIONS SAVE THESE INSTRUCTIONS

IMPORTANT: Directional flow of water is essential for proper function. Serviceable Swing Check Valve is designed for both 2 ½" Socket and 3" Spigot pipe.


IMPORTANT: Prior to installation of valve to fittings, remove lid/valve assembly (#2) to prevent accidental gluing of components.

CAUTION: DO NOT allow any glue into the valve body beyond the pipe stops.


MOUNTING INSTRUCTIONS

The Check Valve can be installed in either horizontal or vertical plumbing. For vertical plumbing, **use only with upward flow**. Follow CORRECT / INCORRECT diagrams below to ensure upward flow.

CORRECT

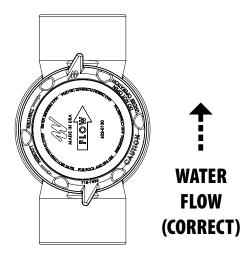

INCORRECT

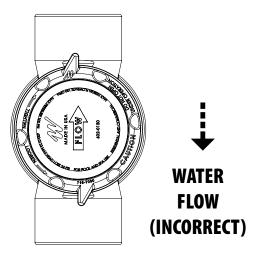




SWING CHECK VALVE LOCATION


• Water flow **MUST** be in the direction of the arrow.

IMPORTANT: Locate the Swing Check Valve at the lowest possible position in the plumbing system. Allow for a minimum of 18" water column. The weight of the water column assists in a greater valve seal and function.

The clear cover permits easy inspection of the Swing Check Valve. If necessary, the valve can be disassembled for inspection of the o-ring and valve assembly. Before reassembly, lubricate o-ring thoroughly with appropriate silicone lubricant.

MAINTENANCE

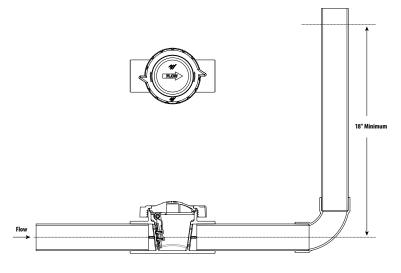

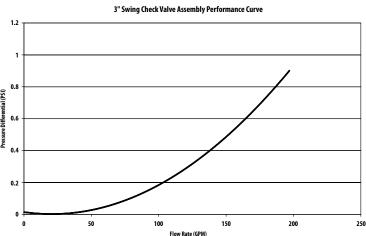

SERVICEABLE SWING CHECK VALVE REPLACEMENT PARTS

Part No. Description
1 718-7031-CPVC Threading Nut
2 705-0111 Lid & Flapper Assembly

3 **805-0241** O-Ring

4 **602-0121** Body (must purchase complete valve)

-- **810-0270** Instruction Sheet

WARRANTY

For product registration visit: www.waterwayplastics.com. For Warranty questions or claims please contact point of purchase.

