


CHANGE 'HEATING SETUP' ON NEO SPA CONTROLLERS

In order to adjust the 'Heating Setup' in NEO spa controllers, 'Service Mode' must be accessed.

To access 'Service Mode':

Press:  MENU


Press:  DOWN to select 'Service Mode'

Rotate View

Special Temp
Heat Mode
Filter Cycles
Date-Time

Panel Lock
No Heat Time
Service Mode
Demo Mode
Serenity Mode

With 'Service Mode' highlighted:

Press:  MENU, then  UP, then  DOWN. –
this will allow you to access 'Service Mode'.




Equipment Test

System Default
System Logged
Spa Light
Configuration

Press  DOWN to select 'Heating Setup'.

Temp Display
Aux Button Map
Heating Setup
Option Timer

Here you can adjust settings for 'Pump', 'Heater', and 'Rating':

Press  MENU to select the field and
 UP or  DOWN to adjust the value.

Equipment Amps

Pump: 12 Amps
Heater: 5.5 KW
Rating: 48 Amps

In a typical 230V system the settings will be:

Pump: 12 Amps
Heater: 5.5 KW
Rating: 48 Amps

In a typical 115V system the settings may be:

Pump: 12 Amps
Heater: 1.0 KW
Rating: 15 Amps

Equipment Amps

Pump: 10 Amps
Heater: 1.0 KW
Rating: 15 Amps



2200 East Sturgis Road, Oxnard, CA 93030 • Phone 805.981.0262 • Fax 805.981.9403
www.waterwayplastics.com • waterway@waterwayplastics.com