
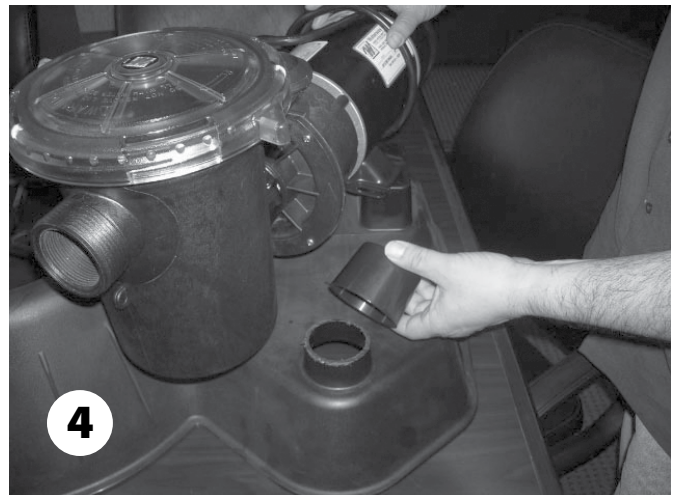
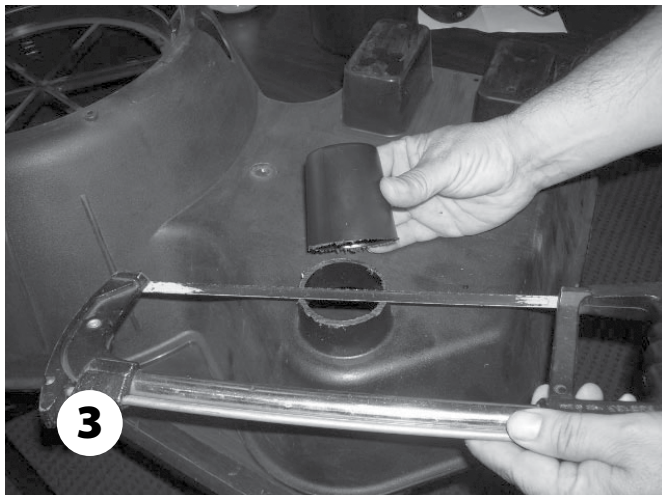
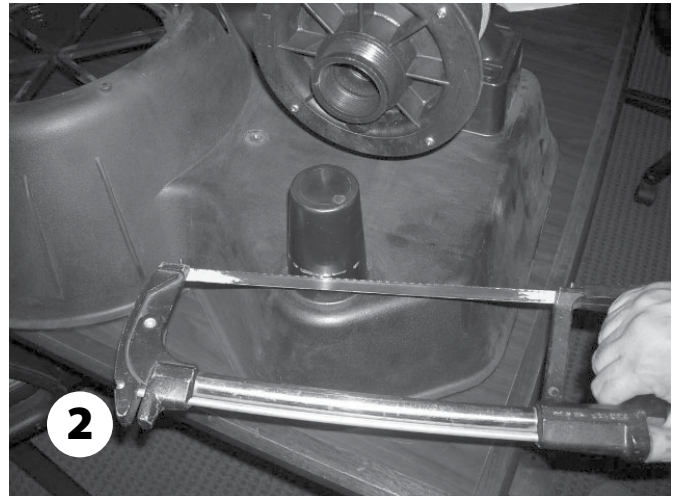


PREPARATION FOR NEW-STYLE JACUZZI BASE

TO ACCOMMODATE YOUR NEW WATERWAY REPLACEMENT PUMP

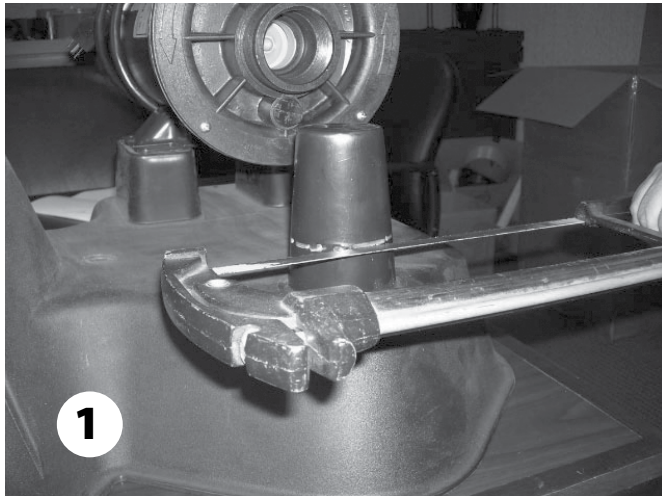

1. Position saw approximately 1 ¼" - 1 ½" from base of riser. **2.** Cut through riser entirely. **3.** Remove riser "cap" and discard.

4. Place Waterway riser cap (PN 672-1340) securely on remaining riser stub and proceed with Waterway pump installation.

WARRANTY

For product registration visit: www.waterwayplastics.com.
For Warranty questions or claims please contact point of purchase.



2200 East Sturgis Road, Oxnard CA 93030 • Phone 805.981.0262 • Fax 805.981.9403
www.waterwayplastics.com • waterway@waterwayplastics.com