


# INSTALLATION & OPERATING INSTRUCTIONS


## LO-PROFILE SPA DRAIN FILL VALVE (600-9101)




1. Find a place around the lower perimeter of the spa where the drain can be installed. The hose on the back must be allowed to travel several inches back and forth freely.

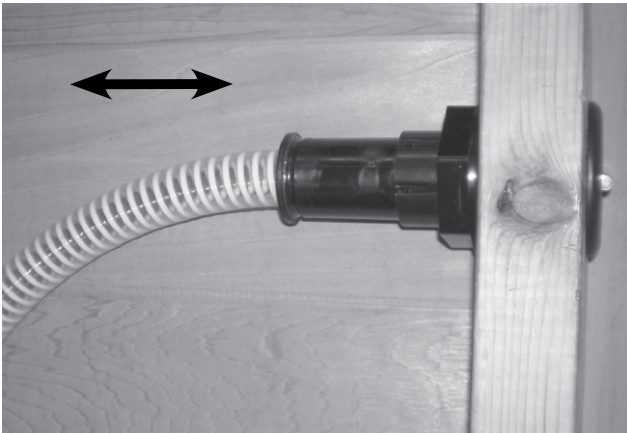

2. Mark where the drain is to be positioned and using a 2" hole saw, drill a hole through the spa wall.

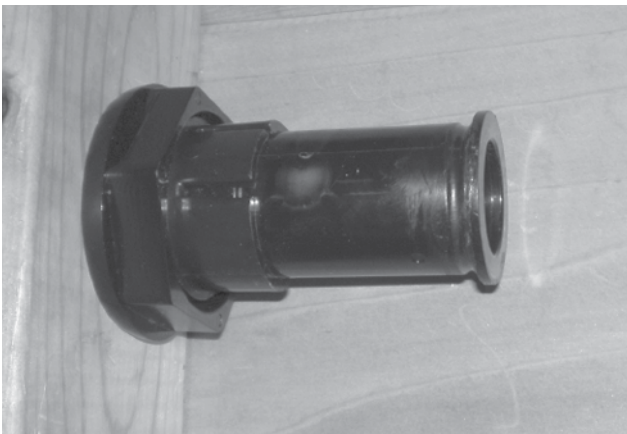

3. Slide the body of the spa drain through the hole and secure with the nut. Silicone can be added to the threads to prevent the nut from backing off.

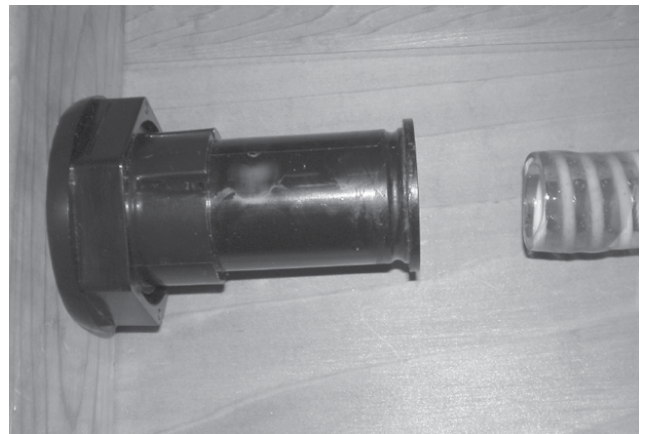


4. The spa drain is designed to be used with  $\frac{3}{4}$ " spa flex hosing. Cut the flex pipe long so that it can travel back and forth freely with spa drain internal then glue it into the back of the spa drain using the proper PVC sealant.

### WARRANTY


For product registration visit: [www.waterwayplastics.com](http://www.waterwayplastics.com).  
For Warranty questions or claims please contact point of purchase.



2200 East Sturgis Road, Oxnard CA 93030 • Phone 805.981.0262 • Fax 805.981.9403  
[www.waterwayplastics.com](http://www.waterwayplastics.com) • [waterway@waterwayplastics.com](mailto:waterway@waterwayplastics.com)

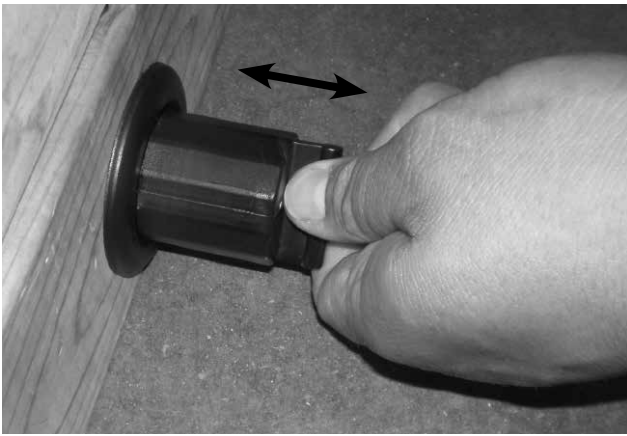


5. Pull knob out from the housing approximately 2" until it snaps into place.

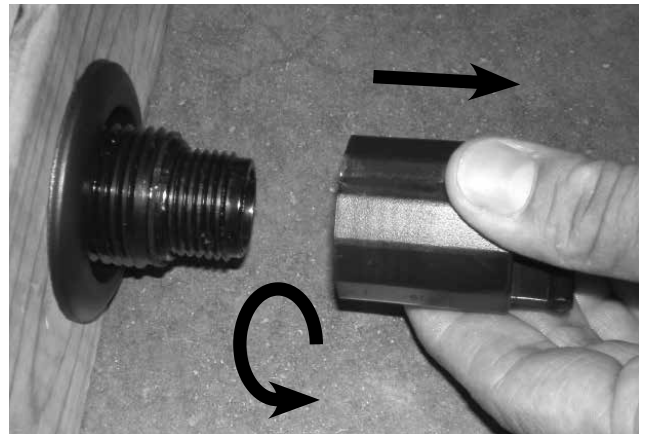


6. Remove cap by unthreading counter clockwise.




7. Thread hose onto the spa drain.

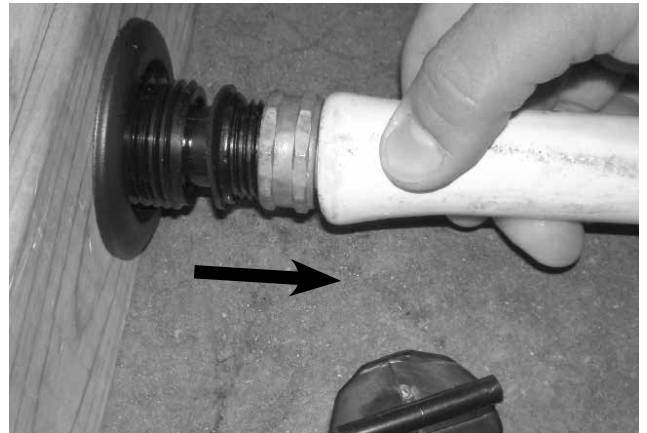

8. Pull the hose outward to allow water to flow. Push inward to shut water flow off.

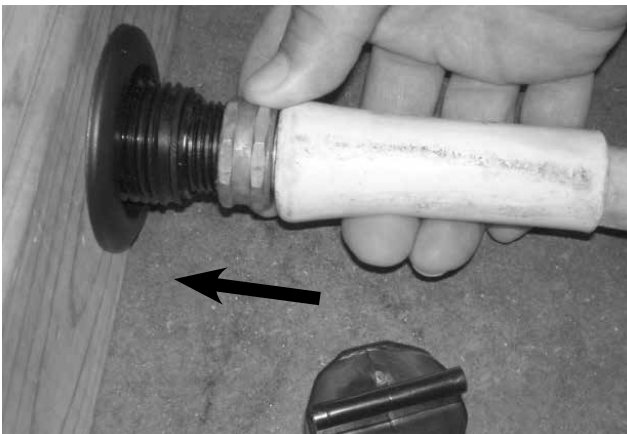

9. To disconnect the hose, push the hose inward approximately 1/2" to shut the water flow off. Unthread the hose.

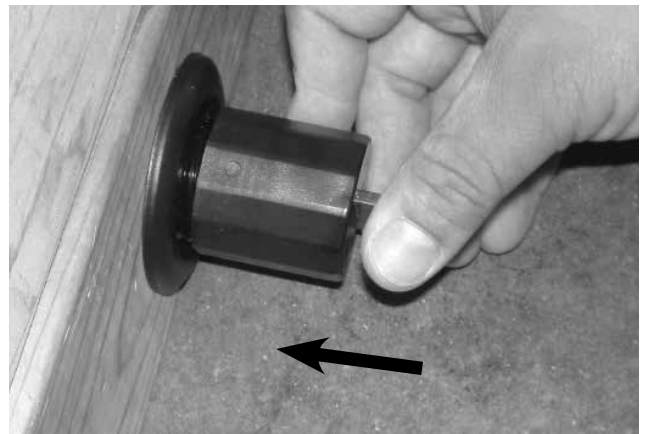

10. Thread the cap back on then push the internal back into the housing until it snaps into place.