


# CHAMPION / PROCLEAN MANIFOLD INSTALLATION



1. Install threaded union adapters on inlet to filter and discharge (top) of pump, using Teflon tape supplied. Use four wraps of the Teflon tape on adapter for proper seal.



3. Finished installation should look like the picture in Figure 3. The Inlet label is on top and before the union going into the filter.

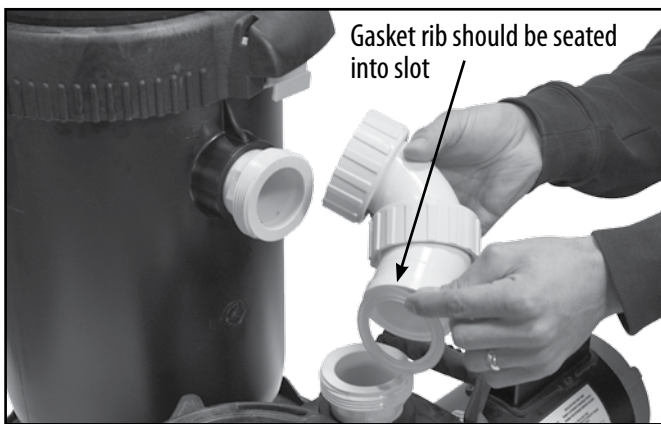

2. Make sure "rib" on gasket is seated into the slot on the manifold union assembly.

## WARRANTY

For product registration visit: [www.waterwayplastics.com](http://www.waterwayplastics.com).  
For Warranty questions or claims please contact point of purchase.



# Waterway™

2200 East Sturgis Road, Oxnard CA 93030 • Phone 805.981.0262 • Fax 805.981.9403

[www.waterwayplastics.com](http://www.waterwayplastics.com) • [waterway@waterwayplastics.com](mailto:waterway@waterwayplastics.com)