


# Bluetooth Installation Instructions – NEO 2100, NEO 1500 & NEO 1200


To install Waterway Bluetooth please follow instructions below:

## BLUETOOTH KIT


Bluetooth kit does not include 3.5mm connector cable. 3.5mm connector cable needs to connect to J1 on the Bluetooth circuit board to an Audio input of the Audio Amplifier. See Bluetooth operation manual.

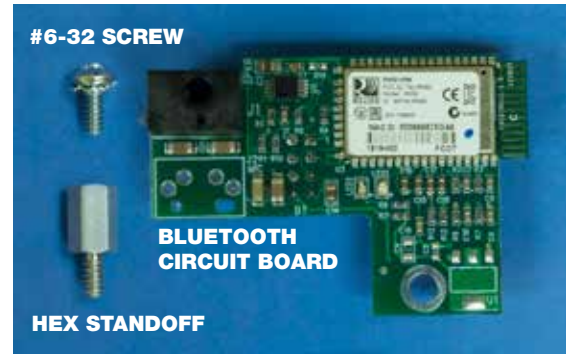


1. Remove indicated mounting screw.

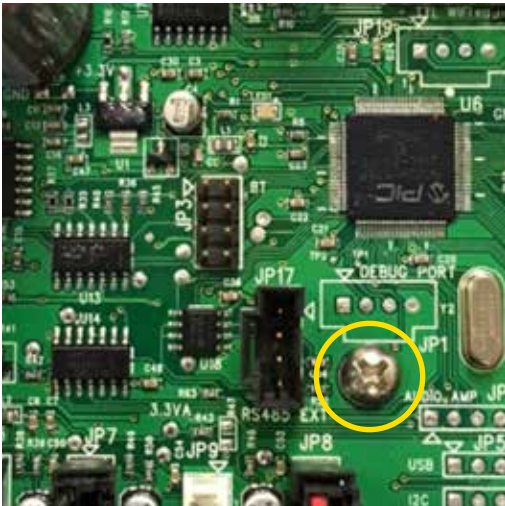

2. Install 1/4" hex standoff.

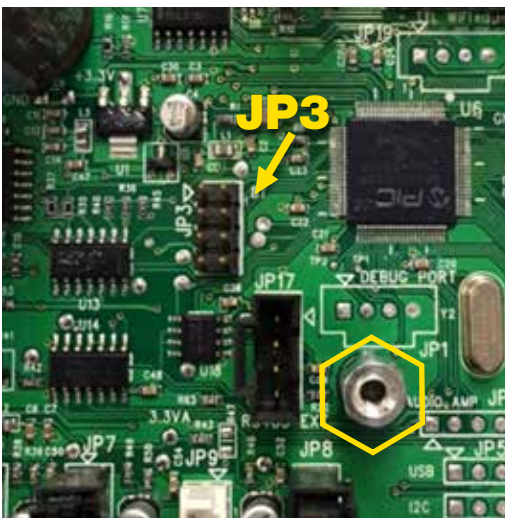

3. Install Bluetooth circuit board. Connector JP3 should mate with the Bluetooth circuit board.

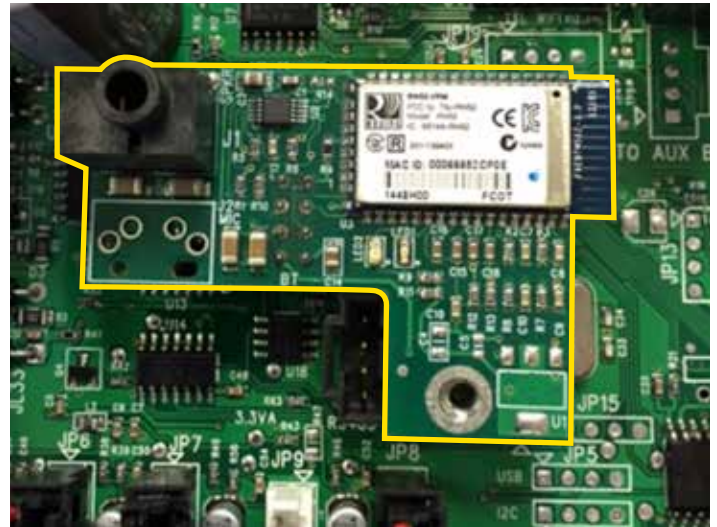

4. Secure the Bluetooth circuit board with a #6-32 screw.

