




REPLACING THREADED SLEEVE ON SAND FILTER BODY

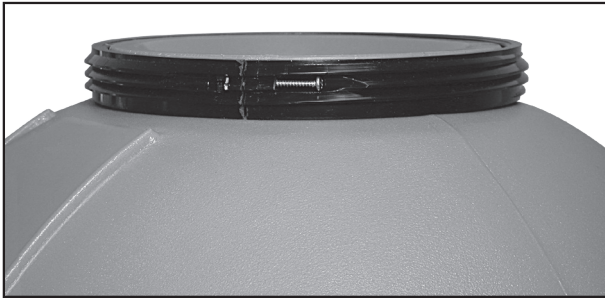

1. Use a Phillips screwdriver to remove screw.

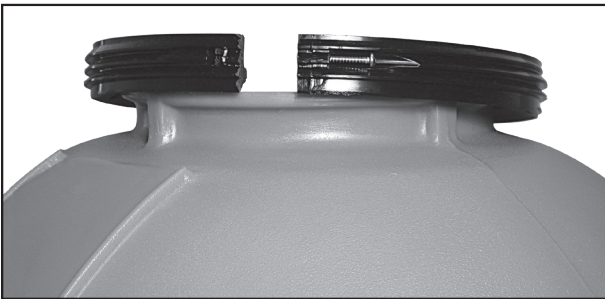

2. Remove and discard old threaded sleeve.

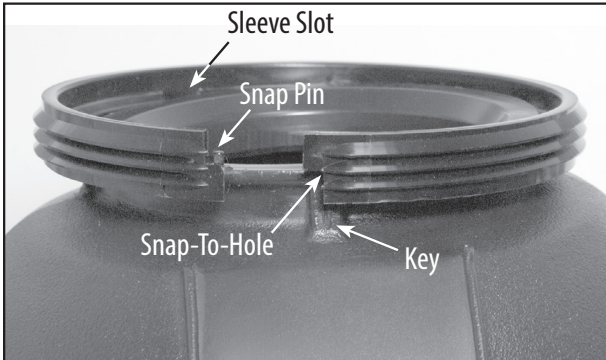

3. Place new screwless threaded sleeve on filter, aligning slots in sleeve with keys on filter body, put a drop of PVC glue on Snap-Pin and snap together.

NOTE: A fully locked threaded sleeve will be loose fitting but won't rotate on the filter body



Designed,
Engineered &
Manufactured
in the USA.

©2025 Waterway Plastics



2200 East Sturgis Road, Oxnard CA 93030 • Phone 805.981.0262 • Fax 805.981.9403

www.waterwayplastics.com • waterway@waterwayplastics.com

810-0151.0425

REPLACING A MULTI-PORT VALVE ON SAND FILTER

- 1) Remove connections and unthread the old multi-port body from the filter body.
- 2) Using a Phillips screwdriver - remove the screw from the threaded sleeve on the filter body
- 3) Replace the threaded sleeve with:


New threaded sleeve R7 version on all size models manufactured before 2024

New threaded sleeve R7 version on all 16" and 19" models manufactured before 2025

New threaded sleeve R5 version on all 22" and 26" models manufactured 2024 to present

New threaded sleeve R5 version on all 16" and 19" models manufactured in 2025


- 4) Install the new multi-port valve

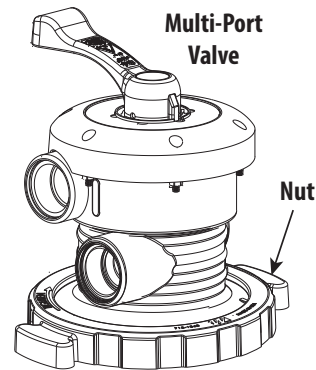

Threaded Sleeve



Nut

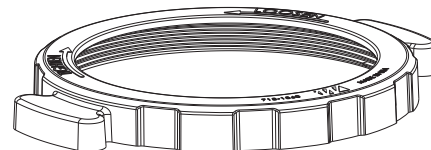

WARRANTY

For product registration visit: www.waterwayplastics.com.
For Warranty questions or claims please contact point of purchase.



2200 East Sturgis Road, Oxnard CA 93030 • Phone 805.981.0262 • Fax 805.981.9403

www.waterwayplastics.com • waterway@waterwayplastics.com