




MOTOR MOUNT/BASE INSTALLATION FOR HI-FLO II AND SUPREME CSA PUMPS

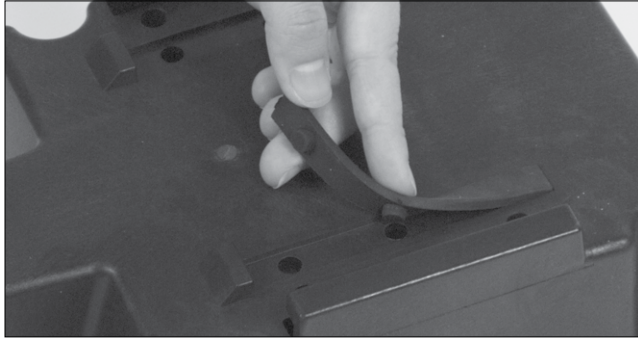


1. Install soft rubber cushion grips into pump base.

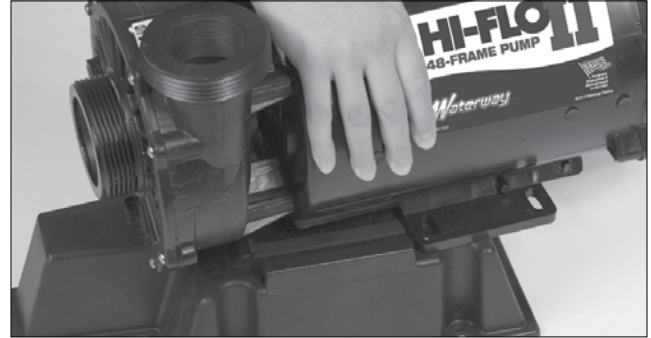

2. Slide pump onto CSA pump motor base.

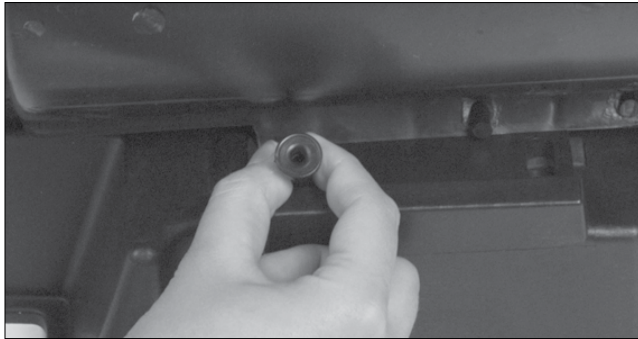


3. Insert collet for lock pin.

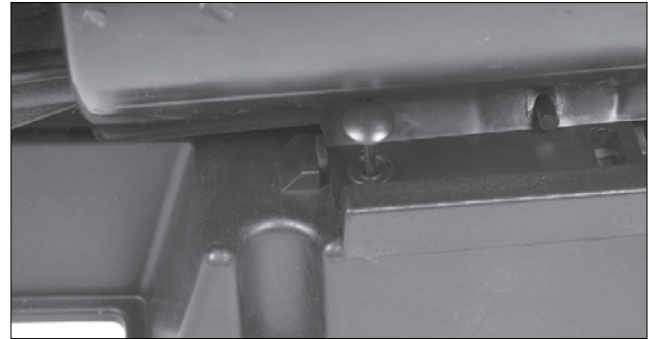

4. Insert lock pin into collet.



Supplied collets and lock pins for Steps 3 and 4

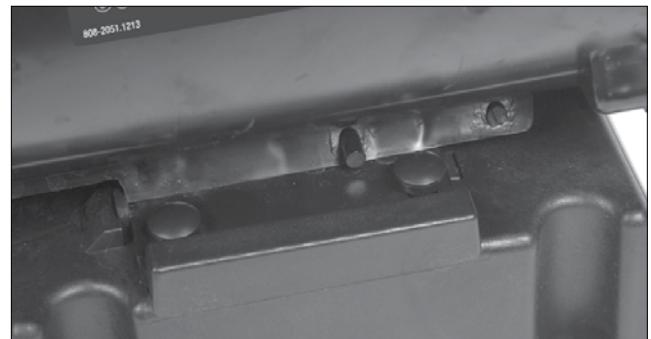

5. Repeat steps 3 and 4 to completion.

WARRANTY

For product registration visit: www.waterwayplastics.com.
For Warranty questions or claims please contact point of purchase.



2200 East Sturgis Road, Oxnard CA 93030 • Phone 805.981.0262 • Fax 805.981.9403
www.waterwayplastics.com • waterway@waterwayplastics.com